

PARTS INDEX

A

ACTUATOR.....	T- 78
ACTUATOR CABLE.....	T- 79
AIR BYPASS VALVE.....	F2- 38
AIR CLEANER (NON-TURBO).....	F1- 34
AIR CLEANER (TURBO).....	F2- 38
AIRFLOW METER (NON-TURBO).....	F1- 96
AIRFLOW METER (TURBO).....	F2-105
AIRFLOW MODE CONTROL DOOR ACTUATOR.....	U- 36
ALTERNATOR.....	G- 8
ANTENNA MAST.....	T-113
ANTI-LOCK BRAKE SYSTEM (ABS).....	P- 60
ATF THERMOSWITCH.....	K- 41
AUDIO UNIT.....	T-108
AUTOMATIC TRANSAXLE.....	K- 50

B

BACK DOOR KEY CYLINDER SWITCH	T- 89
BACK DOOR SWITCH.....	T- 61
BATTERY.....	G- 5
BACK-UP LIGHT.....	T- 42
BAC VALVE (NON-TURBO).....	F1- 42
BAC VALVE (TURBO).....	F2- 46
BLOWER FAN MOTOR.....	U- 32
BLOWER UNIT.....	U- 32
BRAKE FLUID LEVEL SENSOR.....	T- 61
BRAKE HYDRAULIC LINE.....	P- 7
BRAKE PEDAL.....	P- 10
BRAKE SWITCH.....	T- 80

C

CENTRAL PROCESSING UNIT (CPU).....	T- 66
CHARCOAL CANISTER.....	F1- 72
CHECK AND CUT VALVE.....	F1- 72
CIRCUIT OPENING RELAY (NON-TURBO).....	F1- 80
CIRCUIT OPENING RELAY (TURBO).....	F2- 94
CLUTCH COVER.....	H- 14
CLUTCH DISC.....	H- 14
CLUTCH MASTER CYLINDER.....	H- 7
CLUTCH PEDAL.....	H- 5
CLUTCH RELEASE CYLINDER.....	H- 11
CLUTCH SWITCH (MTX)... F1-94, F2-101, T-80	
COMBINATION SWITCH.....	T- 18
COMPRESSOR.....	U- 45
CONDENSER.....	U- 54
CONDENSER FAN.....	U- 56
CONTROL SWITCH PANEL (WIRE TYPE) U-	29
CONTROL SWITCH PANEL (LOGIC TYPE) U-	24
COOLING FAN.....	E- 11
COOLING UNIT.....	U- 37

CRUISE CONTROL MAIN SWITCH.....	T- 81
CRUISE CONTROL SWITCH.....	T- 81
CRUISE CONTROL UNIT.....	T- 78
CYLINDER HEAD GASKET.....	B- 15

D

DAYTIME RUNNING LIGHT RELAY.....	T- 28
DIFFERENTIAL (NON-TURBO).....	J1- 22
DIFFERENTIAL (TURBO).....	J2- 21
DISTRIBUTOR.....	F2-80, G-28
DOOR KEY CYLINDER SWITCH.....	T- 89
DOOR MIRROR.....	S- 48
DOOR SWITCH.....	T- 61
DRIVESHAFT.....	M- 25
DUAL PROPORTIONING VALVE.....	P- 29
DYNAMIC CHAMBER (NON-TURBO).....	F1- 34
DYNAMIC CHAMBER (TURBO).....	F2- 38

E

EC-AT CONTROL UNIT.....	K- 42
EGI MAIN FUSE (NON-TURBO).....	F1- 80
EGI MAIN FUSE (TURBO).....	F2- 94
EGR CONTROL VALVE (NON-TURBO)...	F1- 67
EGR CONTROL VALVE (TURBO).....	F2- 85
EGR MODULATOR VALVE.....	F1- 67
EGR POSITION SENSOR (NON-TURBO) F1-	68
EGR POSITION SENSOR (TURBO).....	F2- 84
ELECTRONICALLY CONTROLLED POWER STEERING (ECPS) CONTROL UNIT.....	N- 50
ENGINE.....	B- 21
ENGINE CONTROL UNIT (NON-TURBO) F1-	81
ENGINE CONTROL UNIT (TURBO).....	F2- 95
ENGINE OIL.....	D- 4
EVAPORATOR.....	U- 57
EXHAUST COMPONENTS.....	F1- 75

F

FLASHER UNIT.....	T- 31
FLYWHEEL.....	H- 14
FRONT AXLE.....	M- 5
FRONT BUMPER.....	S- 38
FRONT DISC BRAKE.....	P- 29
FRONT DOOR.....	S- 8
FRONT FOG LIGHT SWITCH.....	T- 28
FRONT LOWER ARM.....	R- 12
FRONT SHOCK ABSORBER AND SPRING.....	R- 8
FRONT SPEAKER.....	T-112
FRONT STABILIZER.....	R- 16
FUEL FILLER LID REMOTE RELEASE.....	S- 37
FUEL FILTER (HIGH-PRESSURE TYPE: NON-TURBO).....	F1- 52

PARTS INDEX

FUEL FILTER (HIGH-PRESSURE TYPE: TURBO).....	F2- 65
FUEL FILTER (LOW-PRESSURE TYPE: NON-TURBO)	F1- 55
FUEL FILTER (LOW-PRESSURE TYPE: TURBO).....	F2- 65
FUEL LEVEL SENSOR.....	T- 62
FUEL PUMP (NON-TURBO)	F1- 53
FUEL PUMP (TURBO).....	F2- 66
FUEL TANK (NON-TURBO)	F1- 50
FUEL TANK (TURBO)	F2- 63
FUEL TANK SENDER UNIT.....	T- 51

H

HAZARD WARNING SWITCH	T- 21
HEADLIGHT	T- 25
HEADLIGHT CLEANER	S- 73
HEADLIGHT RELAY	T- 89
HEAD LINER	S-107
HEATER CORE	U- 35
HEATER UNIT.....	U- 35
HIGH MOUNTED STOPLIGHT.....	T- 43
HIGH-TENSION LEAD	G- 27
HOLD SWITCH.....	K- 39
HOOD	S- 5
HOOD SWITCH	T- 89
HORN RELAY.....	T- 93

I

IDLE SWITCH (NON-TURBO).....	F1- 99
IDLE SWITCH (TURBO).....	F2-108
IGNITER (TURBO).....	G- 34
IGNITION COIL	G- 27
IGNITION SWITCH	T- 17
INHIBITOR SWITCH (ATX) F1-95, F2-104, K-40	
INJECTOR (NON-TURBO).....	F1- 55
INJECTOR (TURBO).....	F2- 68
INSTRUMENT CLUSTER.....	T- 47
INSTRUMENT PANEL.....	S- 89
INTAKE AIR THERMOSENSOR (NON-TURBO)	F1- 96
INTAKE AIR THERMOSENSOR (TURBO) F2-105	
INTAKE MANIFOLD (NON-TURBO).....	F1- 34
INTAKE MANIFOLD (TURBO).....	F2- 38
INTERCOOLER.....	F2- 38
INTERIOR LAMP	T- 44
INTERLOCK SWITCH (MTX).....	G- 35

J

JOINT BOX	T- 17
-----------------	-------

K

KNOCK SENSOR	F2- 81
--------------------	--------

L

LATERAL LINK AND TRAILING LINK.....	R- 23
LICENSE PLATE LIGHT.....	T- 42
LOCK LINK SWITCH.....	T- 89
LUGGAGE COMPARTMENT LIGHT.....	T- 42

M

MAIN FUSE BLOCK.....	T- 16
MAIN RELAY (NON-TURBO)	F1- 80
MAIN RELAY (TURBO)	F2- 94
MAP LAMP	T- 44
MASTER CYLINDER	P- 14
MODE SWITCH	K- 39
MOLDING AND GARNISH.....	S- 42

N

NEUTRAL SWITCH (MTX: NON-TURBO) F1- 94	
NEUTRAL SWITCH (MTX: TURBO)	F2-103

O

OIL COOLER (TURBO).....	D- 5
OIL COOLER (ATX).....	K-151
OIL FILTER	D- 5
OIL LEVEL SWITCH (IN P/S RESERVOIR) N- 64	
OIL PAN.....	D- 6
OIL PRESSURE SWITCH	T- 62
OIL PUMP (ENGINE).....	D- 8
OIL PUMP (P/S)	N- 50
OIL STRAINER.....	D- 6
OXYGEN SENSOR (NON-TURBO).....	F1-100
OXYGEN SENSOR (TURBO).....	F2-109

P

PANEL LIGHT CONTROL	T- 46
PARKING BRAKE.....	P- 54
PARKING BRAKE SWITCH	T- 61
PARKING LIGHT	T- 35
PASSIVE SHOULDER BELT	S- 98
PCV VALVE	F1- 73
PILOT BEARING	H- 14
POWER ANTENNA MOTOR	T-113
POWER BRAKE UNIT	P- 22
POWER DOOR LOCK	S- 25

PARTS INDEX

POWER WINDOW	S- 29
P RANGE SWITCH.....	K-154
PRESSURE REGULATOR (NON-TURBO)	F1- 59
PRESSURE REGULATOR (TURBO).....	F2- 72
P/S PRESSURE SWITCH (NON-TURBO) .	F1- 95
P/S PRESSURE SWITCH (TURBO)	F2-104
PULSATION DAMPER (NON-TURBO).....	F1- 58
PULSATION DAMPER (TURBO).....	F2- 71
PULSE GENERATOR.....	K- 41

Q

QUARTER WINDOW GLASS	S- 69
----------------------------	-------

R

RADIATOR.....	E- 6
RADIATOR GRILLE	S- 47
REAR AXLE (DRUM BRAKE).....	M- 15
REAR AXLE (DISC BRAKE)	M- 19
REAR BUMPER.....	S- 40
REAR DEFROSTER SWITCH	T- 21
REAR DISC BRAKE	P- 38
REAR DOOR	S- 16
REAR DRUM BRAKE.....	P- 46
REAR SPEAKER.....	T-112
REAR SHOCK ABSORBER AND SPRING	R- 18
REAR STABILIZER.....	R- 25
REAR WIND DEFROSTER RELAY.....	T- 65
REAR WINDOW GLASS.....	S- 64
RECEIVER/DRIER	U- 57
REC-FRESH SELECTOR DOOR ACTUATOR	U- 33
RELEASE BEARING	H- 14
RELEASE FORK	H- 14
RESISTOR.....	T- 28
RESISTOR ASSEMBLY	U- 33
RESONANCE CHAMBER No.1 (NON-TURBO)	F1- 34
RESONANCE CHAMBER No.1 (TURBO)	F2- 38
RESONANCE CHAMBER No.2 (NON-TURBO)	F1- 34

S

SEAT.....	S- 96
SEAT BELT	S-105
SELECTOR LEVER	K-155
SEPARATOR.....	F1- 71

SERVICE VALVE.....	U- 41
SHIFT-LOCK ACTUATOR	K-154
SHIFT MECHANISM (NON-TURBO)	J1- 48
SHIFT MECHANISM (TURBO).....	J2- 48
SIDE MARKER LIGHT (FRONT).....	T- 36
SIDE MARKER LIGHT (REAR).....	T- 39
SIGHT GLASS.....	U- 40
SLIDING SUNROOF.....	S- 76
SOLENOID VALVE (EC-AT)	K- 42
SOLENOID VALVE (EGR)	F1- 67
SOLENOID VALVE (EGR, VACUUM SIDE)	F2- 84
SOLENOID VALVE (EGR, VENT SIDE)....	F2- 84
SOLENOID VALVE (PRC).....	F2- 75
SOLENOID VALVE (PRESSURE REGULATOR CONTROL)..	F1- 62
SOLENOID VALVE (PURGE CONTROL) .	F1- 71
SOLENOID VALVE (WASTE GATE)	F2- 51
SPARK PLUG	G- 26
STARTER.....	G- 17
STARTER CUT RELAY	T- 90
STEERING GEAR AND LINKAGE.....	N- 22
STEERING WHEEL AND COLUMN.....	N- 15
STOP AND TAILLIGHT.....	T- 32
STOP AND TAILLIGHT CHECKER	T- 34
STOPLIGHT SWITCH	F1-94, F2-103, T-34

T

TEMPERATURE BLEND DOOR ACTUATOR	U- 36
THERMOSTAT	E- 10
THERMOSWITCH.....	U- 39
3D WOOFER.....	T-112
THROTTLE SENSOR (NON-TURBO)	F1- 97
THROTTLE SENSOR (TURBO)	F2-106
THROTTLE BODY (NON-TURBO).....	F1- 34
THROTTLE BODY (TURBO).....	F2- 38
TIE-ROD END BOOT	N- 12
TIMING BELT	B- 10
TIRE.....	Q- 3
TRANSAXLE (NON-TURBO).....	J1- 10
TRANSAXLE (TURBO).....	J2- 10
TRANSAXLE OIL (NON-TURBO).....	J1- 7
TRANSAXLE OIL (TURBO).....	J2- 7
TRUNK LID.....	S- 21
TRUNK LID LOCK REMOTE RELEASE	S- 36
TURBOCHARGER	F2- 50
TURN SIGNAL LIGHT	T- 29
TWO-WAY CHECK VALVE	F1- 71

V

VACUUM CHAMBER	F2- 85
V-BELT	G- 16
VEHICLE SPEED SENSOR	K- 41

PARTS INDEX

W

WARNING LIGHT AND SENDERS	T- 53
WASTE GATE ACTUATOR.....	F2- 50
WASHER LEVEL SENSOR.....	T- 62
WATER PUMP.....	E- 8
WATER THERMOSENSOR.....	T- 52
WATER THERMOSENSOR (NON-TURBO)	F1- 99
WATER THERMOSENSOR (TURBO)	F2-108
WATER THERMOSWITCH	E- 14
WHEEL.....	Q- 3
WINDSHIELD GLASS.....	S- 59
WINDSHIELD WIPER	S- 51